Running Water *under Pressure* *is a* Modern Necessity - -

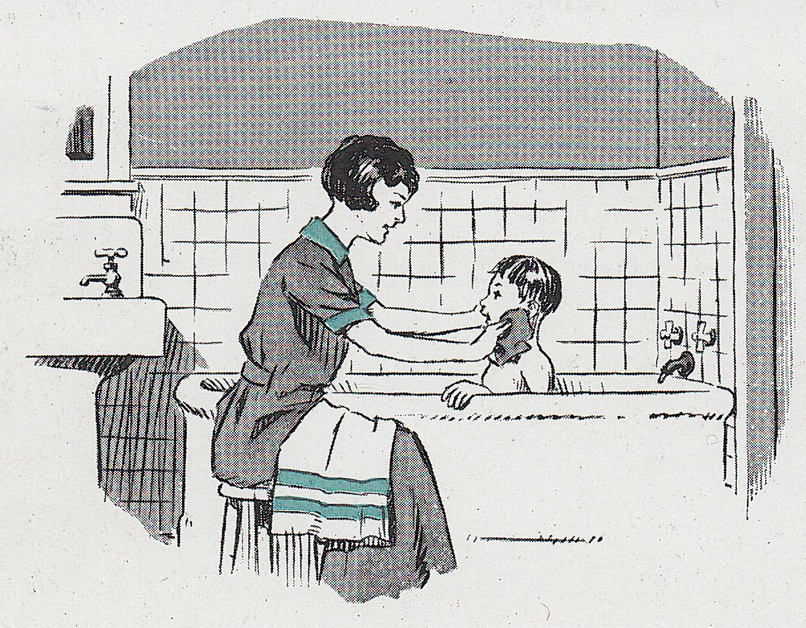

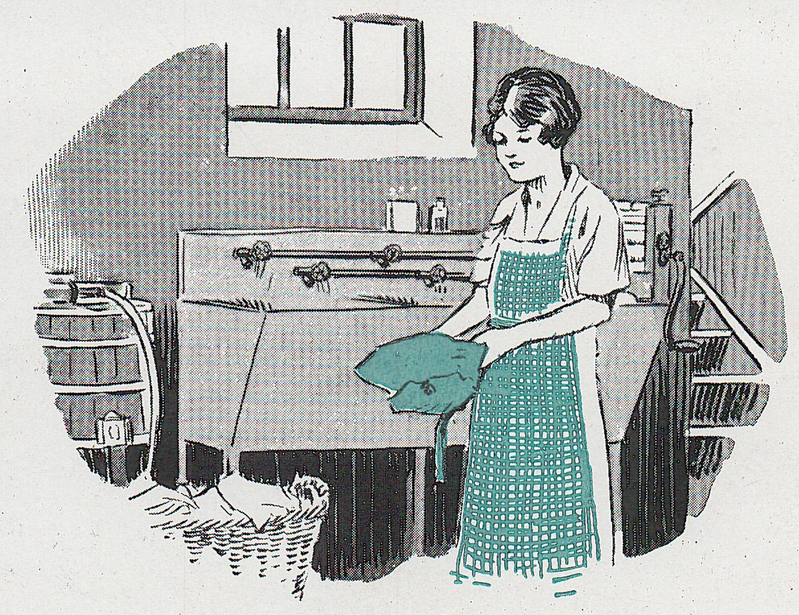

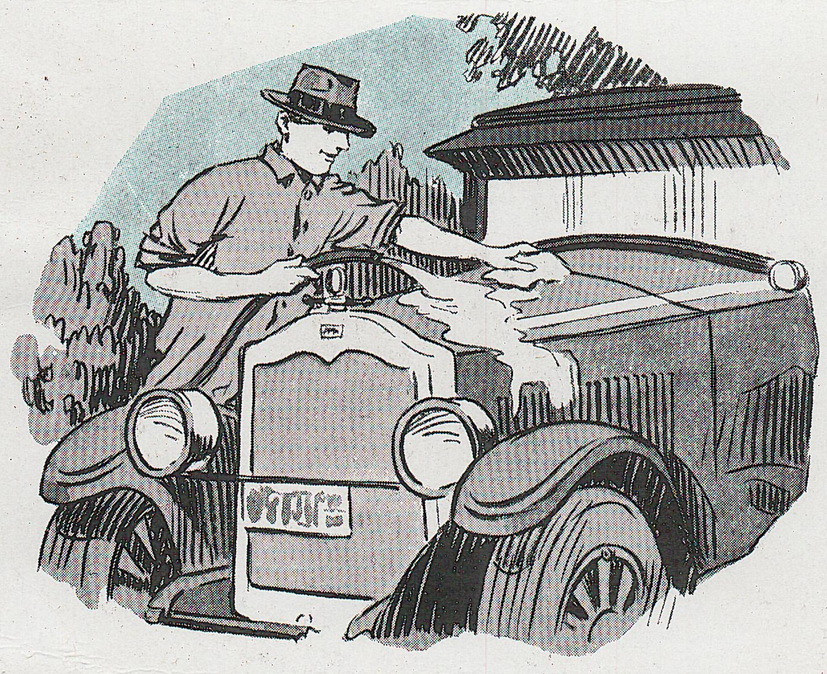

A GOOD supply of running water, under pressure, always available, is one of the greatest of modern conveniences.

For those homes situated out beyond the city water mains, whether in the suburban district or out farther in the country, running water under pressure is a modern necessity.

Water is constantly needed—in the kitchen, for drinking, for the needs of the stock, for washing clothes, to provide better sanitary conveniences and for countless other purposes.

For the woman, it provides relief from one of the greatest sources of household drudgery, relieving her of all hand pumping. It greatly simplifies the work of washing dishes, preparing meals, cleaning, washing clothes, and makes possible a modern bathroom. It is a constant joy and comfort to the women folks.

It means equally as much to the man on the farm, providing plenty of water for the horses, cows and other stock, relieving him of many tiresome hours of pumping by hand. It also helps in other ways about the farm—in cleaning out the stables, in washing the auto, in sprinkling lawn or garden during the extreme dry spells, and, in addition, there is the comfort and convenience of having the home equipped with running water.
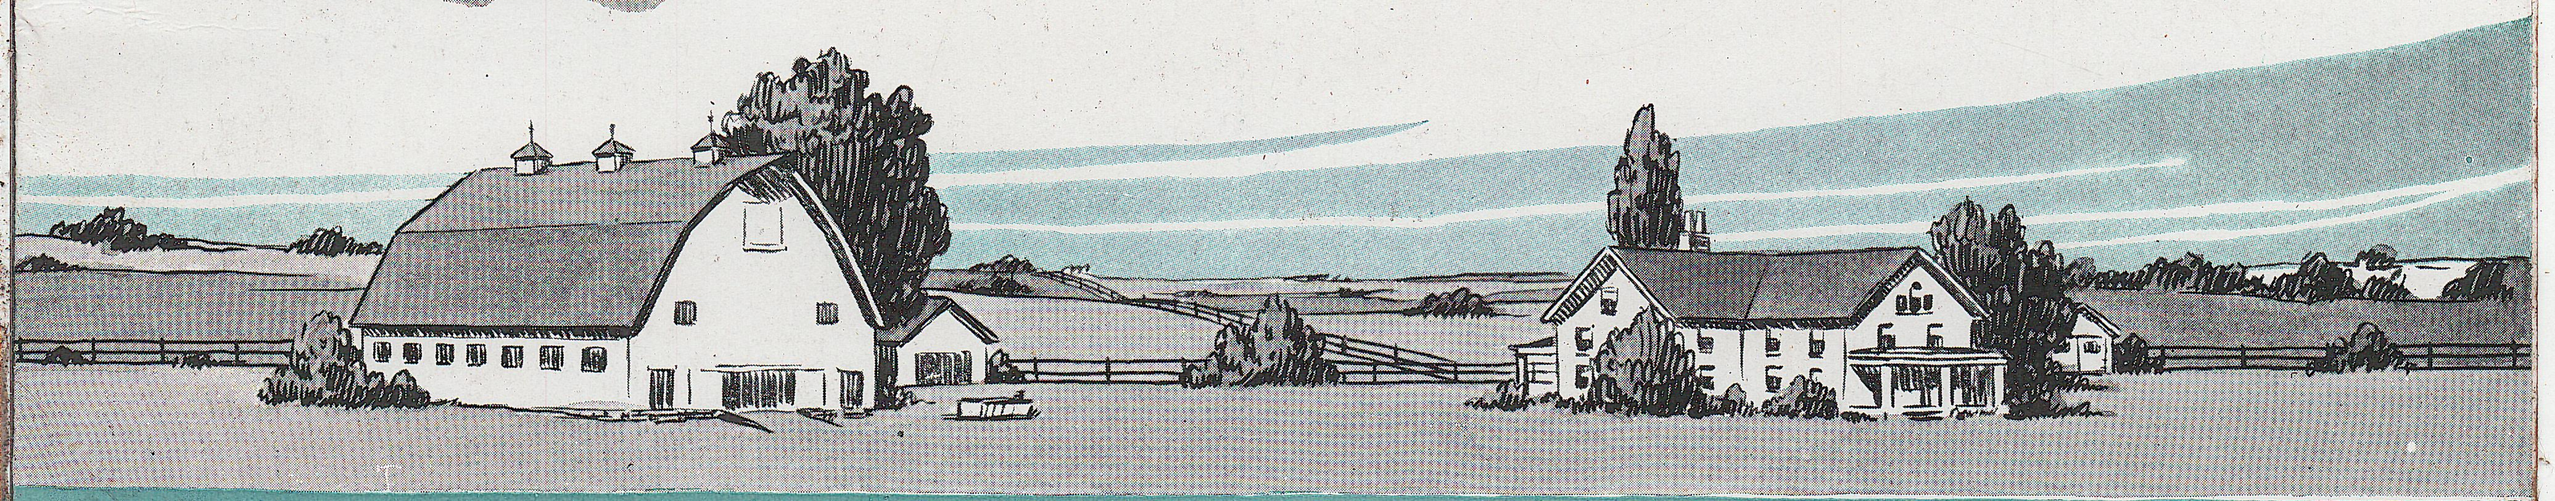
A D-L Water System will make all this possible.